

**NUMERICAL INDEX OF EFFECTIVE WORK PACKAGES/PAGES**

List of Current Changes

Original 0.....	30 June 1992	Change 3.....	1 May 2000
Change 1.....	31 December 1992		(IRAC 1 Inc.)
Change 2.....	20 December 1994	Change 4.....	1 February 2002

Only those work packages (WP) assigned to the manual are listed in this index. If changed pages are issued, insert the changed pages and dispose of superseded pages in accordance with applicable regulations. The portion of

text affected in a changed WP is indicated by change bars or the change symbol “R” in the outer margin of each column of text. Changes to illustrations are indicated by pointing hands or change bars (as applicable).

---

WP/Page No	Title	Change No
<hr/>		
A1-F402B-MMD-300 (VOLUME 1)		
Title.....		4
Page A.....		4
Page B thru H.....		4
Page J (Blank).....		4
TPDR - 1/2 (Blank).....		4
001 00	Alphabetical Index .....	3
002 00	Introduction .....	1
003 00	Alphanumerical Listing of Support Equipment .....	3
004 00	Supplementary Illustrated Listing of Support Equipment .....	1
005 00	Alphanumerical Listing of Materials .....	3
006 00	Technical Directive (TD) and Engine Change Proposal (ECP) Listing .....	4
007 00	Description and Operation of Engine (Part I).....	1
008 00	Description and Operation of Engine (Part II) .....	1
009 00	Safety Precautions for Hazardous Materials and Solutions.....	1
010 00	Peculiar Engine Information .....	1
011 00	Mandatory Maintenance Tasks for Engine Disassembly .....	1
012 00	Mandatory Maintenance Tasks for Post Engine Disassembly .....	3
013 00	Mandatory Maintenance Tasks for Engine Assembly.....	1
014 00	Reserved.....	1
015 00	Reserved.....	1
016 00	Disassembly of Engine.....	1
017 00	Depot Level Processing of LP Compressor Major Repairable Assembly.....	1
018 00	Disassembly of LP Compressor Rotor Assemblies.....	1
019 00	Cleaning, Inspection and Repair of LP Compressor Blade Sets .....	4
019 01	Removal and Application of Snubber Flame Plating, LP Compressor 1st Stage Rotor Blades.....	2
019 02	Removal and Application of Snubber Flame Plating, LP Compressor 2nd Stage Rotor Blades.....	2
019 03	Removal and Application of Snubber Flame Plating, LP Compressor 3rd Stage Rotor Blades .....	2
019 04	Deleted .....	3

WP/Page No	Title	Change No
020 00	Cleaning, Inspection and Repair of LP Compressor Miscellaneous Rotating Components .....	1
021 00	Assembly of LP Compressor Rotor Assemblies .....	1
021 01	Two-Plane Balancing of LP Compressor Rotor Assembly .....	1
022 00	Cleaning, Inspection and Repair of LP Compressor Locating Rings .....	4
022 01	Removal and Application of Abradable Coating, 1st Stage Locating Ring .....	3
022 02	Removal and Application of Abradable Coating, 2nd Stage Locating Ring .....	1
022 03	Removal and Replacement of Sealing Strip, 3rd Stage Locating/Sealing Ring .....	3
023 00	Cleaning, Inspection and Repair of LP Compressor Vanes .....	4
023 01	Removal and Application of Abradable Coating, LP Compressor 3rd Stage Vanes .....	3
023 02	Repair by Blending, LP Compressor 3rd Stage Vanes .....	3
024 00	Disassembly, Cleaning, Inspection, Repair and Assembly of LP Compressor Case and Miscellaneous Static Components .....	4
024 01	Removal and Application of Abradable Coating, LP Compressor Case .....	3
024 02	Restoration of Alignment Bolt Locations, LP Compressor Case .....	1
024 03	Installation of Oversize Inserts, LP Compressor Case .....	1
025 00	Disassembly, Cleaning, Inspection, Repair and Assembly of LP Support Cone Repairable Assembly and LP Compressor Front Hub .....	1
025 01	Removal and Application of Abradable Coating, Bearing Housing (No. 1 Main) .....	1
025 02	Repair by Application of Metal Spray, LP Support Cone .....	3
026 00	Disassembly of Air/Oil Separator Assembly .....	1
027 00	Cleaning, Inspection and Repair of Air/Oil Separator .....	1
027 01	Restoration of Bearing Location, Gear B 501014 .....	1
028 00	Assembly and Balancing of Air/Oil Separator Assembly .....	1

A1-F402B-MMD-310 (VOLUME 2)

029 00	Disassembly of Accessory Gearbox Repairable Assembly (Part I)	
030 00	Disassembly of Accessory Gearbox Repairable Assembly (Part II)	
031 00	Disassembly of Accessory Gearbox Repairable Assembly (Part III)	
032 00	Disassembly of Accessory Gearbox Repairable Assembly (Part IV)	
033 00	Cleaning, Inspection and Repair of Accessory Gearbox Repairable Assembly (Part I)	
033 01	Restoration of Transfer Tube Bore, Front Gearbox Case	
033 02	Restoration of Oil Tank Vent Tube Bore, Front Gearbox Case	
033 03	Installation of Oversize Fast End Hollow/Headless Pins, Front Gearbox Case	
033 04	Restoration of Stud Locations, Front Gearbox Case	
033 05	Installation of Oversize Fast End Headless Pin, Rear Gearbox Case	
033 06	Installation of Screw Thread Inserts (Solid), Front Gearbox Case	
034 00	Cleaning, Inspection and Repair of Accessory Gearbox Repairable Assembly (Part II)	
035 00	Cleaning, Inspection and Repair of Accessory Gearbox Repairable Assembly (Part III)	
035 01	Restoration of Bearing Location, Spur Gear B 474147	
035 02	Restoration of Bearing Location, Spur Gear Shaft B 455308	
035 03	Restoration of Internal Shaft Coupling Location, Spur Gear B 497692	
036 00	Cleaning Inspection and Repair of Accessory Gearbox Repairable Assembly (Part IV)	
036 01	Removal and Replacement of Screw Thread Insert (Pinned), Cover B 474437	
037 00	Cleaning, Inspection and Repair of Accessory Gearbox Repairable Assembly (Part V)	
037 01	Removal and Replacement of Bushings, LP Governor Drive Housing	
038 00	Assembly of Accessory Gearbox Repairable Assembly (Part I)	
039 00	Assembly of Accessory Gearbox Repairable Assembly (Part II)	
040 00	Assembly of Accessory Gearbox Repairable Assembly (Part III)	
041 00	Assembly of Accessory Gearbox Repairable Assembly (Part IV)	
042 00	Assembly of Accessory Gearbox Repairable Assembly (Part V)	

WP/Page No	Title	Change No
043 00	Assembly of Accessory Gearbox Repairable Assembly (Part VI)	
044 00	Assembly of Accessory Gearbox Repairable Assembly (Part VII)	
045 00	Assembly of Accessory Gearbox Repairable Assembly (Part VIII)	
046 00	Assembly of Accessory Gearbox Repairable Assembly (Part IX)	
047 00	Assembly of Accessory Gearbox Repairable Assembly (Part X)	
048 00	Disassembly of Intermediate Case Repairable Assembly	
049 00	Disassembly of HP Gear Carrier	
050 00	Cleaning, Inspection and Repair of Intermediate Case and No. 2 Bearing Assembly	
050 01	Restoration of Alignment Bolt Locations, Intermediate Case	
050 02	Installation of Oversize Fast End Headless Pins, Intermediate Case	
050 03	Restoration of Number Two Bearing Mounting Flange, Intermediate Case and No.2 Bearing Assembly	
051 00	Cleaning, Inspection and Repair of Intermediate Case Repairable Assembly Associated Items	
051 01	Machining and Application of Metal Spray to Seal Housing	
052 00	Cleaning, Inspection and Repair of HP Gear Carrier	
052 01	Installation of Oversize Fast End Headless Pins, Zerol Bevel Gear	
052 02	Restoration of Sealing Ring Locations, Gearshaft Carrier	
052 03	Installation of Oversize Fast End Headless Pins, Gearshaft Carrier	
053 00	Cleaning, Inspection and Repair of Variable Inlet Guide Vanes	
053 01	Restoration of Platform Location, Variable Inlet Guide Vanes	
053 02	Repair by Blending, Variable Inlet Guide Vanes	
054 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Valve Housing Assembly (VIGV Control Mechanism)	

A1-F402B-MMD-320 (VOLUME 3)

055 00	Assembly of HP Gear Carrier	
056 00	Assembly of Intermediate Case Repairable Assembly	
057 00	Reserved	
058 00	Disassembly of LP Gear Case Repair Assembly	
059 00	Cleaning Inspection and Repair of LP Gear Case Repairable Assembly	
059 01	Restoration of Sealing Ring Location, LP Gearshaft Carrier	
059 02	Restoration of Sealing Ring Location, LP Gearshaft Carrier	
060 00	Assembly of LP Gear Case Repairable Assembly	
061 00	Cleaning, Inspection and Repair of LP Compressor Delivery Duct and Extension Duct	
061 01	Repair of Cracks by Welding/Patching, LP Compressor Delivery Duct	
061 02	Restoration of Headless Pin Locations, LP Compressor Delivery Duct	
062 00	Depot Level Processing of HP Compressor Repairable Assembly	
063 00	Cleaning, Inspection and Repair of HP Compressor Case	
063 01	Removal and Application of Abradable Coating, HP Compressor Case	
063 02	Removal and Application of Antifret Coating, HP Compressor Case	
064 00	Cleaning, Inspection and Repair of Air Bleed Ducts	
064 01	Restoration of 6th Stage Air Bleed Apertures, Air Bleed Duct	
065 00	Cleaning, Inspection and Repair of HP Compressor Vanes	
065 01	Restoration of Vane Tips by Welding, HP Compressor Vanes	
065 02	Repair by Blending, HP Compressor Vanes	
066 00	Disassembly of HP Compressor Rotor Repairable Assembly	
067 00	Cleaning, Inspection and Repair of HP Compressor Front Hub, Rear Shaft and Rear Seal	
067 01	Installation of Oversize Fast End Headless Pins, HP Compressor Rear Shaft	
067 02	Repair of Labyrinth Seal Fins by Blending, Rear Seal	

---

WP/Page No	Title	Change No
067 03	Restoration of Bearing Location, HP Compressor Front Hub	
068 00	Cleaning, Inspection and Repair of HP Compressor Disks, Spacers and Miscellaneous Items	
068 01	Installation of Oversize Fast End Headless Pins, HP Compressor Spacers	
068 02	Removal and Application of Abradable Coating, HP Compressor Spacers	
068 03	Installation of Oversize Fast End Headless Pins, HP Compressor Disks	
069 00	Cleaning, Inspection and Repair of HP Compressor Blades	
070 00	Assembly and One-Plane Balancing of HP Compressor Rotor Assemblies	
071 00	Assembly of HP Compressor Rotor Repairable Assembly	
072 00	Blade Tip-Grinding of HP Compressor Rotor Repairable Assembly	
073 00	Two-Plane Balancing of HP Compressor Rotor Repairable Assembly	
074 00	Depot Level Processing of Combustion Major Repairable Assembly	
075 00	Disassembly, Cleaning, Inspection, Repair and Assembly of HP Compressor Delivery Case	
075 01	Removal and Application of Antifret Coating, HP Compressor Delivery Case	
075 02	Removal and Application of Sermetel W Coating, HP Compressor Delivery Case	
075 03	Removal and Application of Thermal Sprayed Coating, HP Compressor Delivery Case	
075 04	Removal and Application of Antifret Coating, Support Ring	
076 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Mounting Trunnions	
076 01	Installation of Nonregular Spherical Bearing, LH Mounting Trunnion	
077 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Bulkhead Assembly	
078 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Combustion Chamber Outer Case and Support Ring	
078 01	Installation of Oversize Fast End Headless Pins, (Locations P-1 and P-2) Combustion Chamber Outer Case	
078 02	Localized Removal and Application of Thermal Sprayed Coating, Combustion Chamber Outer Case	
078 03	Removal and Application of Thermal Sprayed Coating, Combustion Chamber Outer Case	
078 04	Repair of Cracks in Weir Tube Attachment Welds, Combustion Chamber Outer Case	
078 05	Removal and Application of Antifret Coating, Support Ring	
078 06	Installation of Oversize Fast End Headless Pins (Location P-3), Combustion Chamber Outer Case	
078 07	Weld Repair of Locating Ring Slot Wear, Combustion Chamber Outer Case	
079 00	Reserved	
080 00	Cleaning, Inspection and Repair of Combustion Chamber Case	
080 01	Replacement of Damaged Section, Combustion Chamber Case	
081 00	Cleaning, Inspection and Repair of Combustion Chamber Inner Case, Exit Guide Vane Case and Seal Housing	
081 01	Repair of Cracks by Welding, Combustion Chamber Inner Case	
081 02	Removal and Application of Antifret Coating, Exit Guide Vane Case	
081 03	Repair by Blending, Exit Guide Vane Case	
081 04	Removal and Application of Abradable Coating, Seal Housing	
A1-F402B-MMD-330 (VOLUME 4)		
082 00	Cleaning, Inspection and Repair of HP Turbine 1st Stage Vanes	
083 00	Cleaning, Inspection and Repair of Support Cone, Seal Housings and Miscellaneous Items	
083 01	Removal and Replacement of Honeycomb Seal, Inner Seal Housing	

WP/Page No	Title	Change No
083 02	Removal and Replacement of Honeycomb Seal, Outer Seal Housing	
084 00	Cleaning, Inspection and Repair of Fuel Atomizing Nozzles, Primer Units and Fuel Dump Valve	
084 01	Repair by Replacement of Damaged Subcomponents, Primer Unit	
084 02	Repair by Replacement of Damaged Subcomponents, Fuel Dump Valve	
085 00	Depot Level Processing of HP Turbine Major Repairable Assembly	
086 00	Disassembly of HP Turbine 1st Stage Rotor Assembly	
087 00	Disassembly of HP Turbine 2nd Stage Rotor Assembly	
088 00	Cleaning, Inspection and Repair of HP Turbine 1st Stage Rotor Assembly	
088 01	Restoration of Labyrinth Seal Fins, HP Turbine 1st Stage Disk	
088 02	Restoration of Labyrinth Seal Fins, Airflow Disk	
089 00	Cleaning, Inspection and Repair of Coupling Ring	
089 01	Removal and Application of Abradable Coating, Coupling Ring	
090 00	Cleaning, Inspection and Repair of HP Turbine 2nd Stage Rotor Assembly	
091 00	Cleaning, Inspection and Repair of HP Turbine Blades	
091 01	Restoration of Shroud Abutment Faces, HP Turbine 1st Stage Blades	
091 02	Repair by Blending, HP Turbine 1st Stage Blades	
091 03	Restoration of Shroud Abutment Faces, HP Turbine 2nd Stage Blades	
091 04	Repair by Blending, HP Turbine 2nd Stage Blades	
091 05	Restoration of Inner Lip Seal by Welding, HP Turbine 2nd Stage Blades	
092 00	Disassembly of HP Turbine 2nd Stage Vane Repairable Assembly	
093 00	Cleaning, Inspection and Repair of Front Seal Housing and Seal Housing	
093 01	Removal and Replacement of Honeycomb Seal, Front Seal Housing	
093 02	Removal and Application of Antifret Coating, Seal Housing	
093 03	Removal and Replacement of Honeycomb Seal, Seal Housing	
094 00	Cleaning, Inspection and Repair of HP Turbine 2nd Stage Multi-Nozzle Vanes	
094 01	Weld Repair of Cracks, HP Turbine 2nd Stage Multi-Nozzle Vanes	
094 02	Removal and Application of Abradable Coating, HP Turbine 2nd Stage Multi-Nozzle Vanes	
094 03	Removal and Replacement of Liner, HP Turbine 2nd Stage Multi-Nozzle Vanes	
095 00	Assembly of HP Turbine 2nd Stage Vane Repairable Assembly	
096 00	Assembly of HP Turbine 1st Stage Rotor Assembly	
097 00	Assembly of HP Turbine 2nd Stage Rotor Assembly	
098 00	Two-Plane Balancing of HP Turbine 1st/2nd Stage Rotor Assemblies (Part I)	
098 01	Two-Plane Balancing of HP Turbine 1st/2nd Stage Rotor Assemblies (Part II)	
099 00	Disassembly of Oil Transfer Tube Repairable Assembly (Oil/Air Transfer Duct Assembly)	
100 00	Cleaning, Inspection and Repair of Oil Transfer Tube Repairable Assembly	
100 01	Restoration of Labyrinth Seal Fins, Oil Transfer Tube	
100 02	Restoration of Labyrinth Seal Fins, Air Transfer Tube	
101 00	Assembly and One-Plane Balancing of Oil Transfer Tube Repairable Assembly (Oil/Air Transfer Duct Assembly) (Part I)	
101 01	Assembly and One-Plane Balancing of Oil Transfer Tube Repairable Assembly (Oil/Air Transfer Duct Assembly) (Part II)	
102 00	Depot Level Processing of LP Turbine Major Repairable Assembly	
103 00	Disassembly, Cleaning, Inspection and Repair of LP Turbine 1st Stage Rotor Repairable Assembly, LP Turbine Rotor Hub and Miscellaneous Items	
103 01	Restoration of Labyrinth Seal Fins, LP Turbine 1st Stage Rotor Disk	
103 02	Restoration of Labyrinth Seal Fins, LP Turbine Rotor Hub	

---

WP/Page No	Title	Change No
104 00	Disassembly, Cleaning, Inspection and Repair of LP Turbine 2nd Stage Rotor Repairable Assembly	
104 01	Restoration of Labyrinth Seal Fins, LP Turbine 2nd Stage Disk	
105 00	Cleaning, Inspection and Repair of LP Turbine Blade Sets	
105 01	Restoration of Shroud Abutment Faces, LP Turbine 1st Stage Blades	
105 02	Repair by Blending, LP Turbine 1st Stage Blades	
105 03	Restoration of Shroud Abutment Faces, LP Turbine 2nd Stage Blades	
105 04	Repair by Blending, LP Turbine 2nd Stage Blades	
106 00	Assembly of LP Turbine 1st Stage Rotor Repairable Assembly	
106 01	One-Plane Balancing of LP Turbine 1st Stage Rotor Repairable Assembly	
107 00	Assembly of LP Turbine 2nd Stage Rotor Repairable Assembly	
107 01	One-Plane Balancing of LP Turbine 2nd Stage Rotor Repairable Assembly	
108 00	Disassembly of LP Turbine 1st Stage Seal Diaphragm and Vanes	
109 00	Cleaning, Inspection and Repair of LP Turbine 1st/2nd Stage Vanes	
109 01	Repair of Cracks by Brazing, LP Turbine 2nd Stage Nozzle Vanes	
110 00	Cleaning, Inspection and Repair of Seal Diaphragm, LP 2nd Stage Seal Housing and Retaining Plate	
110 01	Removal and Application of Antifret Coating, Seal Diaphragm	
110 02	Removal and Replacement of Honeycomb Seal, Seal Diaphragm	
110 03	Removal and Application of Antifret Coating, LP 2nd Stage Seal Housing	
110 04	Removal and Replacement of Honeycomb Seal, LP 2nd Stage Seal Housing	
A1-F402B-MMD-340 (VOLUME 5)		
111 00	Assembly of LP Turbine 1st Stage Seal Diaphragm and Vanes	
112 00	Cleaning, Inspection and Repair of Turbine Case	
112 01	Installation of Oversize Fast End Headless Pins, Turbine Case	
113 00	Disassembly of LP Turbine Shaft Repairable Assembly	
114 00	Cleaning, Inspection and Repair of LP Turbine Shaft Repairable Assembly	
114 01	Restoration of No. 4 Main Bearing Location, LP Compressor Drive Shaft	
114 02	Two-Plane Balancing of LP Compressor Drive Shaft	
115 00	Assembly of LP Turbine Shaft Repairable Assembly	
116 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Top and Bottom Heatshields and Radiation Shield	
116 01	Repair of Cracks by Welding, Radiation Shield	
117 00	Depot Level Processing of Exhaust Diffuser Major Repairable Assembly	
118 00	Cleaning, Inspection and Repair of Exhaust Diffuser Major Repairable Assembly Subcomponents	
118 01	Repair of Cracks by Welding, Exhaust Diffuser	
118 02	Repair by Patching, Exhaust Diffuser	
118 03	Installation of Oversize Fast End Headless Pins, Exhaust Diffuser	
119 00	Depot Level Processing of Exhaust Duct Major Repairable Assembly	
119 01	Cleaning, Inspection and Repair of Exhaust Duct Major Repairable Assembly Subcomponents	
119 02	Removal and Replacement of Defective Manifold(s), Exhaust Duct	
119 03	Installation of Solid Screw Thread Inserts, Exhaust Duct	
119 04	Weld Repair of Cracks in Bracket/Box Section Weld Line, Exhaust Duct	
119 05	Repair of Cracks by Welding, Exhaust Duct	
119 06	Restoration of Tapped Holes, Exhaust Duct	

WP/Page No	Title	Change No
120 00	Disassembly of Rear Outer Bearing Ring Assemblies	
121 00	Cleaning, Inspection and Repair of Rear Outer Bearing Ring Assemblies (Subcomponents)	
121 01	Removal and Installation of Studs, RH and LH Outer Bearing Rings	
121 02	Installation of Oversize Fast End Headless Pins, RH and LH Outer Bearing Rings	
122 00	Assembly of Rear Outer Bearing Ring Assemblies	
123 00	Disassembly of Front Outer Bearing Ring Assemblies	
124 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Turbine Exhaust Nozzles	
124 01	Repair of Cracks and Fretting by Welding, Turbine Exhaust Nozzles	
124 02	Repair of Nozzle Skin by Patching, Turbine Exhaust Nozzles	
124 03	Removal and Replacement of Outboard Vane, Turbine Exhaust Nozzles	
125 00	Cleaning, Inspection and Repair of Front Outer Bearing Ring Assemblies (Subcomponents)	
126 00	Assembly of Front Outer Bearing Ring Assemblies	
127 00	Cleaning, Inspection and Repair of Intermediate Ducts	
127 01	Removal and Replacement of Union Bodies, Intermediate Ducts	
128 00	Disassembly, Cleaning, Inspection, Repair and Assembly of LP Exhaust Nozzles	
129 00	Disassembly of Oil Pumps Repairable Assembly	
130 00	Cleaning, Inspection and Repair of Pressure/Scavenge Pump Cases and Covers	
130 01	Repair by Installation of Screw Thread Inserts (Solid), HP Bearing Scavenge Pump Case	
130 02	Installation of Oversize Fast End Headless Pins, HP Bearing Scavenge Pump Case	
130 03	Restoration of Worn Bore by Installation of Liner, Pressure Pump Case	
130 04	Installation of Oversize Bushings, HP/LP Bearing Scavenge Pump Cases and Scavenge Pump Cover	
130 05	Installation of Oversize Bearing Sleeve, Main Scavenge Pump Case	
130 06	Installation of Oversize Bearing Sleeve, Pressure Pump Case	
130 07	Installation of Oversize Bushing/Bearing Sleeve, Pressure Pump Case	
131 00	Cleaning, Inspection and Repair of Oil Pump Shafts, Spur Gears and Miscellaneous Items	
132 00	Assembly of Oil Pumps Repairable Assembly	
133 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Oil Tank and Miscellaneous Items	
133 01	Repair of Cracks by Welding, Oil Tank	
133 02	Weld Repair of Wire Locking Tab, Oil Tank	
134 00	Disassembly, Cleaning, Inspection, Repair and Assembly of Oil Tank and Miscellaneous Items	
135 00	Disassembly of Oil Cooler	
136 00	Cleaning, Inspection and Repair of Oil Cooler	
136 01	Inspection and Repair, Fuel System Support Assembly	
137 00	Assembly and Testing of Oil Cooler	
138 00	Disassembly of Variable Inlet Guide Vane (VIGV) Position Transmitter	
139 00	Cleaning, Inspection and Repair of Variable Inlet Guide Vane (VIGV) Position Transmitter	
140 00	Assembly of Variable Inlet Guide Vane (VIGV) Position Transmitter	
141 00	Cleaning, Inspection, Repair and Testing of Air, Oil, Fuel and Water Hoses and Tubes	
141 01	Repair by Replacement of Damaged Subcomponents, Top and Bottom Fuel Manifolds	
141 02	Deleted	

---

WP/Page No	Title	Change No
142 00	Disassembly of Engine Bearings	
143 00	Cleaning, Inspection and Repair of Engine Bearings	
144 00	Assembly of Engine Bearings	
145 00	Assembly of Engine	
146 00	Preparation of Test Equipment, Engine Testing	
147 00	Initial Engine Preparation (Preparation Area), Engine Testing	
148 00	Final Engine Preparation (Test Cell), Engine Testing	
149 00	Safety and Operating Precautions, Engine Testing	
150 00	Test Schedule, Test Log and Specifications, Engine Testing	
151 00	Troubleshooting, Engine Testing	
152 00	Post Test Removal (Test Cell), Engine Testing	
153 00	Post Test Removal (Preparation Area), Engine Testing	
154 00	Post Test Final Inspections, Engine Testing	
155 00	Repair by Removal, Inspection and Installation of Test Equipment, Engine Testing	
156 00	Preparation for Service and Storage of Engine and Engine Assemblies	
157 00	Preparation of Support Equipment for Use, General Information	
157 01	Preparation for Use of Blade Tip Gage Fixture	
157 02	Preparation for Use of LP Turbine Rotor Repairable Assembly Balance Adaptors	
157 03	Preparation for Use of HP Compressor Spacer Balancing Mandrels	
157 04	Preparation for Use of LP Compressor Drive Shaft Balancing Simulator	
158 00	General and Specific Maintenance Care Instructions for Support Equipment	
159 00	Repair Procedures for Support Equipment	

---